

EC Tanksealer and Rustarrestor manual

1. Put the Rustarrestor in a dry rusty fuel tank and turn the liquid around till the rust is wet keep doing this now and then (regular) till the rust is gone.
2. Make the fuel tank empty, the Rustarrestor can be filtered for using again let the tank dry for 24 hours.
3. After that rinse it with solvent when you want to coat with EC tanksealer when you don't use EC tanksealer, cleaning with petrol is possible.
4. After drying from the solvent put the sealer in and turn the fuel tank around so it's reaching every place inside the tank
5. Empty what is in the fuel tank back in the can for a second time or another fuel tank turn the tank upside down on a box or something to leak out it will dry with humidity in 4 till 6 hours a second coating need to be done after 2 – 4 hours.
6. After drying the tanks needs to dry for 3 days before filling it with petrol

Tip: For not damaging the outside of the fuel tank wrap it in foil and close the fuel opening with duct-tape

When there is a petrol filter inside the tank use air pressure to blow out the filter as long as the sealer isn't dry

